

# PURE Help Centre

[Knowledgebase](#) > [Wireless Speakers](#) > [DiscovR](#) > [General Questions](#) > [How do I check my speaker's battery level?](#)

## How do I check my speaker's battery level?

Pure Support-UK - 2019-06-03 - [General Questions](#)

To check the current battery level, press and hold the source button. The number of illuminated segments on the light ring will indicate the current level of charge remaining.